

A 548 – 572 MHz

US-TV channel Ch. 27 (548-554 MHz), Ch. 28 (554-560 MHz), Ch. 29 (560-566 MHz), Ch. 30 (566-572 MHz)

EBU TV channel Ch. 30 (542-550 MHz), Ch. 31 (550-558 MHz), Ch. 32 (558-566 MHz), Ch. 33 (566-574 MHz)

	Channel	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8
XS WIRELESS	1	548.250	554.400	560.350	566.350	548.350	554.350	560.400	558.250
	2	548.650	554.800	560.750	566.750	549.050	555.050	561.200	561.850
	3	549.150	555.300	561.250	567.250	550.050	556.050	562.400	563.850
	4	549.850	555.900	561.850	567.850	550.850	556.850	563.100	564.950
	5	550.850	556.900	563.150	569.150	552.150	558.150	564.100	566.250
	6	552.350	557.600	563.950	569.950	552.750	558.750	564.700	566.850
	7	553.150	558.800	564.950	570.950	553.250	559.250	565.200	567.650
	8	553.750	559.600	565.650	571.650	553.650	559.650	565.600	569.150
	9	555.050	561.800	550.850	548.750	563.150	548.750	551.300	570.150
	10	556.150	564.200	568.250	550.350	568.250	550.350	554.400	570.850
	11	558.150	565.600	569.650	551.750	569.650	551.750	555.800	571.350
	12	561.750	568.700	571.250	556.850	571.250	569.150	558.200	571.750
Deutsch	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							
English	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							
Français	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							
Español	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							

A 548 – 572 MHz

US-TV channel Ch. 27 (548-554 MHz), Ch. 28 (554-560 MHz), Ch. 29 (560-566 MHz), Ch. 30 (566-572 MHz)

EBU TV channel Ch. 30 (542-550 MHz), Ch. 31 (550-558 MHz), Ch. 32 (558-566 MHz), Ch. 33 (566-574 MHz)

	Channel	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8
XS WIRELESS	1	548.250	554.400	560.350	566.350	548.350	554.350	560.400	558.250
	2	548.650	554.800	560.750	566.750	549.050	555.050	561.200	561.850
	3	549.150	555.300	561.250	567.250	550.050	556.050	562.400	563.850
	4	549.850	555.900	561.850	567.850	550.850	556.850	563.100	564.950
	5	550.850	556.900	563.150	569.150	552.150	558.150	564.100	566.250
	6	552.350	557.600	563.950	569.950	552.750	558.750	564.700	566.850
	7	553.150	558.800	564.950	570.950	553.250	559.250	565.200	567.650
	8	553.750	559.600	565.650	571.650	553.650	559.650	565.600	569.150
	9	555.050	561.800	550.850	548.750	563.150	548.750	551.300	570.150
	10	556.150	564.200	568.250	550.350	568.250	550.350	554.400	570.850
	11	558.150	565.600	569.650	551.750	569.650	551.750	555.800	571.350
	12	561.750	568.700	571.250	556.850	571.250	569.150	558.200	571.750
IT	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							
NL	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							
PT	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							
RU	Note: - country - usergroup - other	Frequencies usable in Americas, Europe and some Asian countries Frequencies may require licence Please contact your local authorities							