



Sound Sation
CLASSIC 15R
15W COMBO with Reverb
Designed in ITALY

USER MANUAL

Congratulations for purchasing CLASSIC 15R, the classic-tone-generator you were looking for!

WARNING! Please note the important safety instructions.

Water and Moisture: NEVER use an amplifier in damp or wet conditions. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

Power Cord Protection: Protect the power cord from being walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs and at the point where they exit from the apparatus.

Servicing: Do not attempt to service this product yourself without an expert as opening covers may expose you to dangerous hazards. Please refer all servicing to qualified service personnel.

Lightning: Always unplug this product during lightning storms or when unused for long periods of time.

Overloading: Do not overload wall outlets as this can result in a risk of fire.

Heat: The products should be placed away from heat sources such as heat registers, stoves, or others that produce heat.

Control panel explanation:

1. INPUT

Plug your guitar in here. Plug your low output Guitar into high input & use low input for high output Guitar.

2. CLEAN VOLUME

Sets the overall level of the Clean channel.

3. GAIN

Adjusts the level of gain and overdrive in the Drive channel.

4. DRIVE SELECT

Press to switch between Clean channel and Drive channel.

5. DRIVE VOLUME

Sets the overall level of the Drive channel in conjunction with the gain control.

6. TREBLE

Controls the high-frequencies in the preamplifier for Clean and Drive channel.

7. MIDDLE

Controls the middle-frequencies in the preamplifier for Clean and Drive channel.

8. BASS

Controls the low-frequencies in the preamplifier for Clean and Drive channel.

9. REVERB

Adjusts the digital reverb level.

10. AUX IN

RCA inputs for your portable MP3/CD/TAPE player or drum machine. These inputs are not affected by the amplifier's volume or EQ controls. Set and control the signal at the external equipment.

11. HEADPHONES

Output jack for connecting standard stereo or mono headphones. This jack can also be used as an unbalanced line output to mixer or other equipment 1/4 stereo or mono phone plug connection.

NOTE: Connecting this jack automatically disables the internal speaker.

12. POWER SWITCH

Switches the amplifier ON or OFF. When the switch is OFF, the amplifier is completely shut down.

13. POWER SOCKET

Connect the included power cord in accordance with the voltage and frequency ratings specified on the rear panel of your amplifier.

TECH SPECS:

Output power: 15W

1 channel with overdrive push/push selector and independent clean/drive volumes, reverb

Controls: Normal Volume, Drive Volume, Gain, Treble, Middle, Bass, Reverb

Headphones out

Input: 2 (instrument, Aux)

Power: 15W into 8 ohm

Woofers: 8"

Weight: 6.8 Kg

Measurements: 33.7(H)x31.4(L)x18.4(D)

WARRANTY

All SOUNDSATION products feature a limited two-year warranty. This two-year warranty is specific to the date of purchase as shown on your purchase receipt. SOUNDSATION shall satisfy the warranty obligations by remedying any material or manufacturing faults free of charge at SOUNDSATION's discretion either by repair or by exchanging individual parts or the entire appliance. While under warranty period, defective products may be returned to the authorized SOUNDSATION dealer together with original proof of purchase. To avoid any damages in transit, please use the original packaging if available. Freight charges have to be covered by the owner of the product.

The following cases/components are NOT covered by the above warranty:

- any accessories supplied with the product
- improper use (e.g. operating errors, mechanical damage, incorrect operating voltage)
- faults due to wear and tear
- any modification of the product effected by you or a third party

WARNING – PLEASE READ CAREFULLY – EU and EEA

(Norway, Iceland and Liechtenstein) only



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (WEEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.