

CVO 16 24in/24out Audio Interface



Quick Start Guide

evo 16

Welcome to your new EVO 16 Audio Interface. Please read this quick guide to get you started.

Connect

01

Connect the EVO 16 to your computer using the USB cable provided. Next, connect the unit to mains power using the included IEC power cable. Once successfully connected, the onboard LED screen will illuminate and play a short start-up animation alongside the Main Volume LED ring illuminating.

Install Drivers


02

In order to start using your EVO 16, you will need to download and install the latest drivers, which can be found at evo.audio/evo16/downloads. Once the drivers are installed, you may be prompted to update the unit's firmware. A full installation guide can be found in the user manual which is available to download via our website.

The Features

03

- 1. 8 x EVO Mic Preamps
- 2. 2 x JFET Instrument Inputs
- 3. 2 x Independent Headphone Outputs
- 4. 8 x Line Outputs
- 5. 2 x Optical Inputs/Outputs
- 6. Smartgain
- 7. Phantom Power
- 8. Instrument Input Button
- 9. Main Volume Control
- 10. Main Output Select
- 11. Programmable Function Button
- 12. Headphones 1+2 Output Select
- 13. High-Res LCD Screen
- 14. Word Clock Output
- 15. USB2.0 (USB-C Connection)
- 16. Power Supply

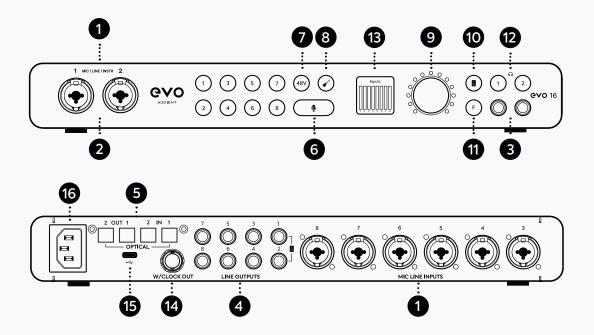

ARC

04

Register your product and download free software and plugins to help get you started. For more details: evo.audio/arc

Smartgain

EVO 16's most exciting and game changing feature is 'Smartgain'. Start playing or singing and Smartgain mode will automatically set the level of your microphones.








Activate

Play

Record





Press one of the input channel buttons (or two, if setting Smartgain for a stereo pair) to select the channels to be adjusted.



3 Press the Smartgain button again to begin the process





The Smartgain LED will start flashing red and the volume wheel LED's will illuminate indicating that Smartgain Mode is now listening



5 Start playing or performing into the microphone



Smartgain Mode will dial in the correct levels and when complete the Smartgain button will flash green twice to indicate it has been successful



7 You are now ready to start recording

